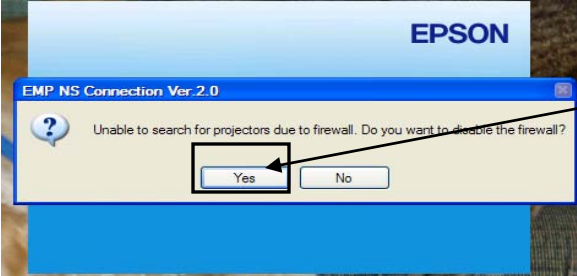 


 
Directions for using the projector wirelessly

Use the icon on the desktop to open the program. If the Epson Projector icon is not on your desktop:

 
1. **The projector must be turned on.**

2. Start, Programs, EPSON PRJOECTOR, EMP NS connection V2

3.  *Unable to search for projectors due to firewall.
Click Yes

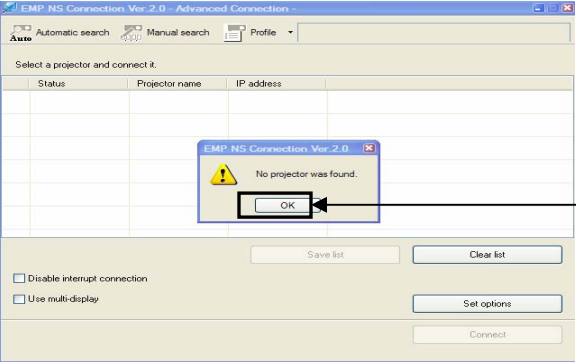4.  No Projector was found
OK

5. At the top of the box, click on Manual Search.

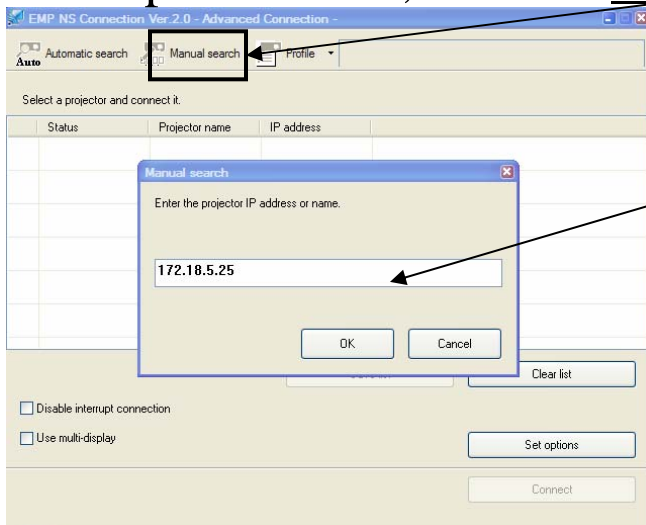

Type in the IP # found on the top of the projector
Click OK

Put check in the box by your projector. Click save list. Name your projector. Click connect.

When finished, click **disconnect** in bottom right corner.